


MIDI KORG NANOCONTROL 2 CONTROLLER INSTALLATION GUIDE


- Once downloaded, unzip the folder.
- You'll find all the files you need to install/setup Korg Nano Kontrol 2 consoles:



- Install drivers provided for Windows 7/8 or 10
- Install and launch publisher Korg KontrolEditor.exe

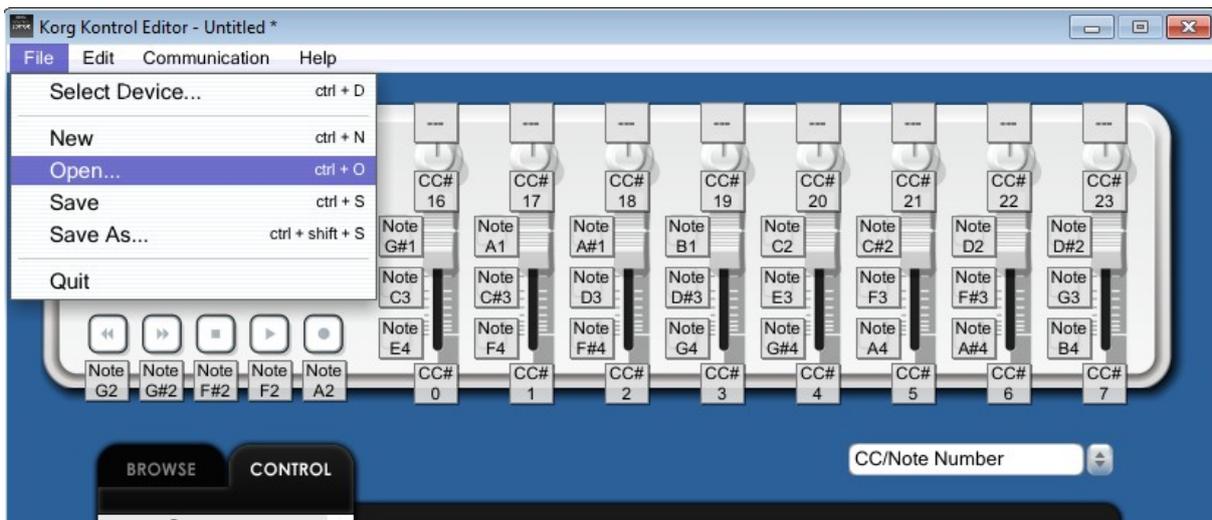


- File/Open then browse to the location where you unzipped the Korg files.
- Open the file NanoKontrol2.nktrl2_data, which loads the layout into the program.
- Now send it to the console:

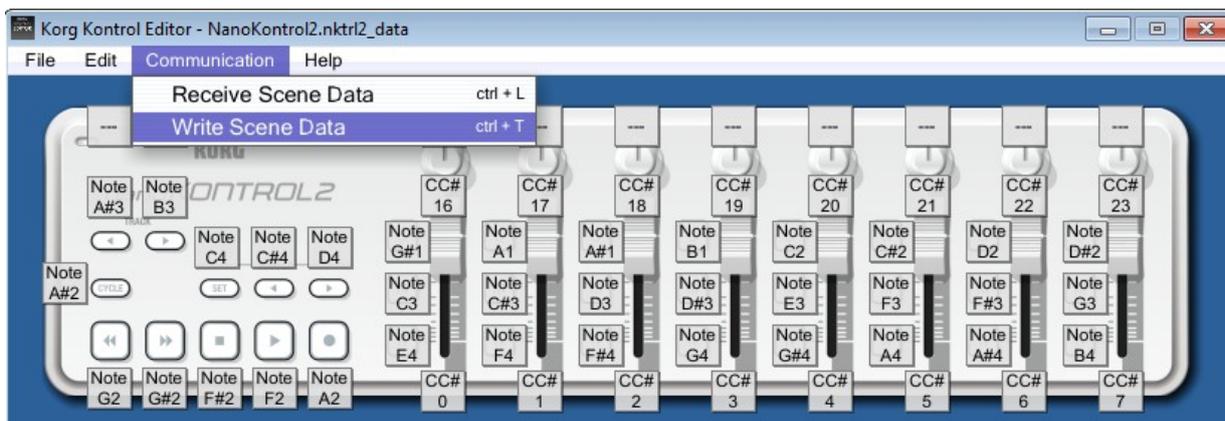


You must now close this application before continuing, otherwise the communication with Prego will not be possible!!

- Start Prego 2.3.11.0 or higher
- Go to Menu / Setup / **Local IO**

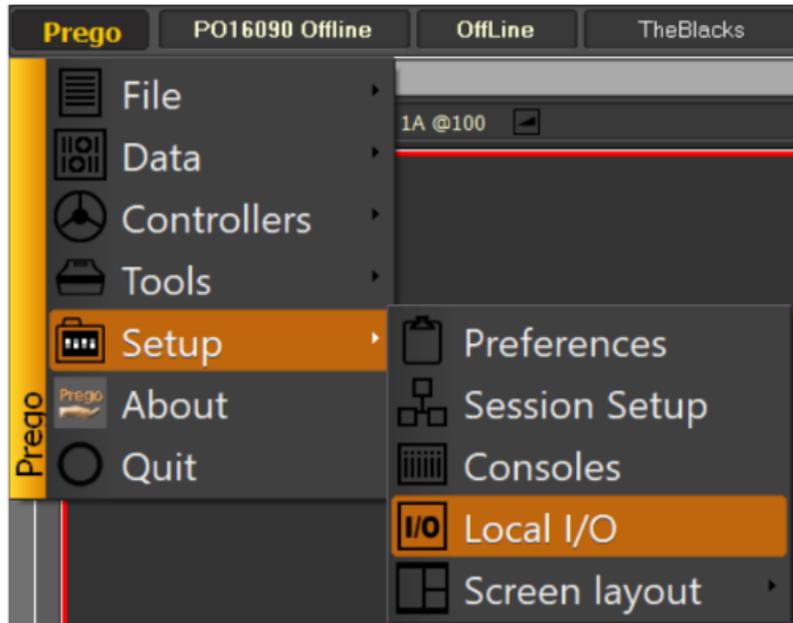


- NanoKontrol will now appear in MIDI IN. Click on it.

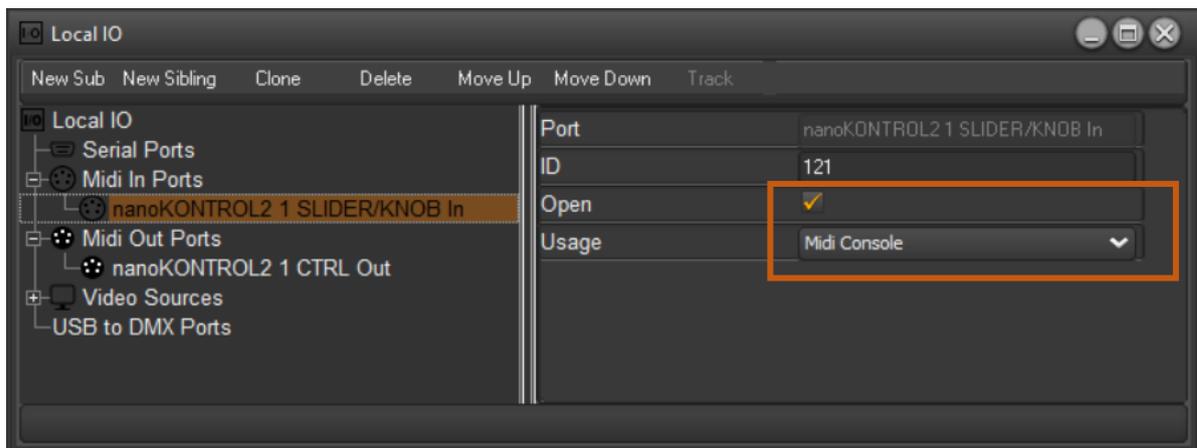

- Check Open and choose MIDI Console from the list below
- Do the same for MIDI Out


- During your tests if you want to check incoming or outgoing MIDI data, you can view traffic:

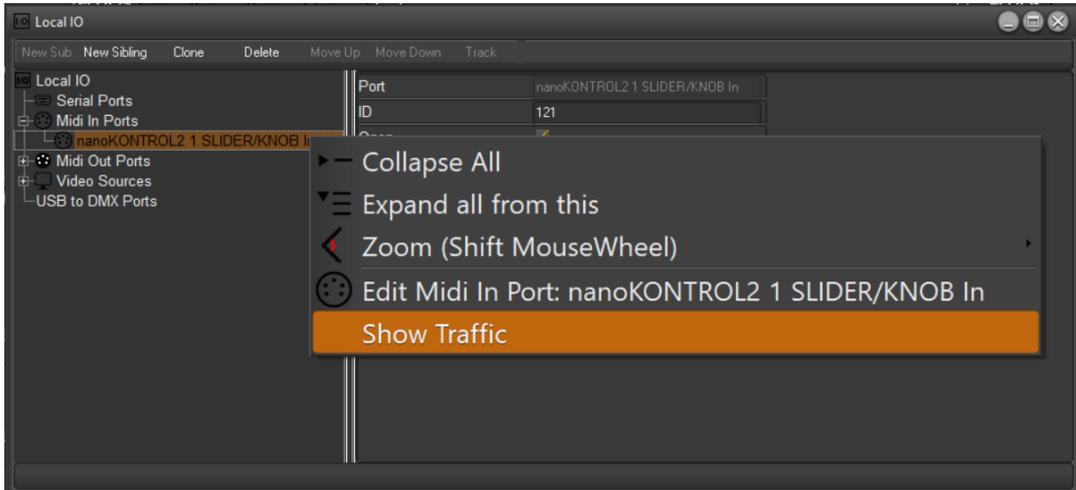


- Go to Menu Prego / Setup / Consoles

Only if NanoKontrol is not present in the MIDI Console list

- In MIDI Consoles, right click then **Import Custom**,

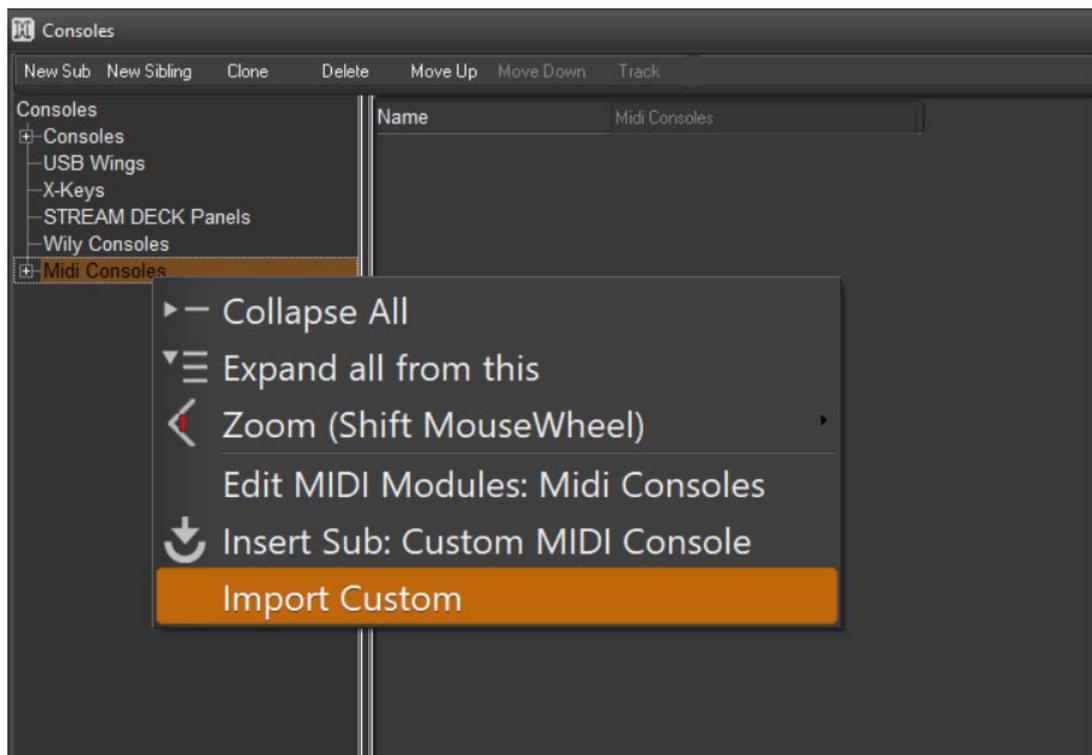


Browse to the folder containing the **NanoKontrol.ini** file and open it.

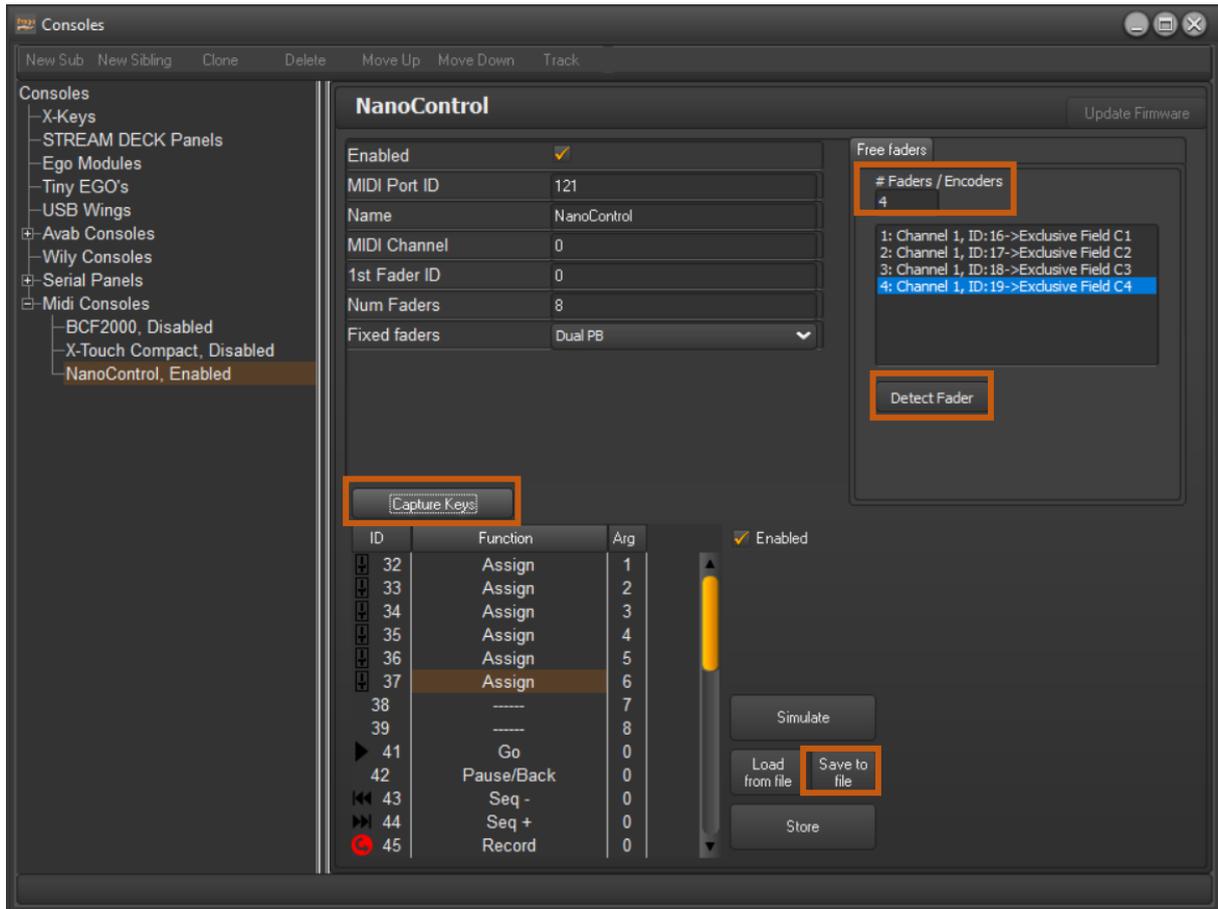

You can of course then adapt the functions to the buttons as you please, going through **Capture Keys**, and assigning another function.


You can change/add the functions of faders /encoders via the **Detect Fader** key

Just change the amount of Free Faders in the field **#Faders / Encoders**, then select one of the lines created below, move the fader / encoder, finally assign it a function by double clicking on the line concerned.

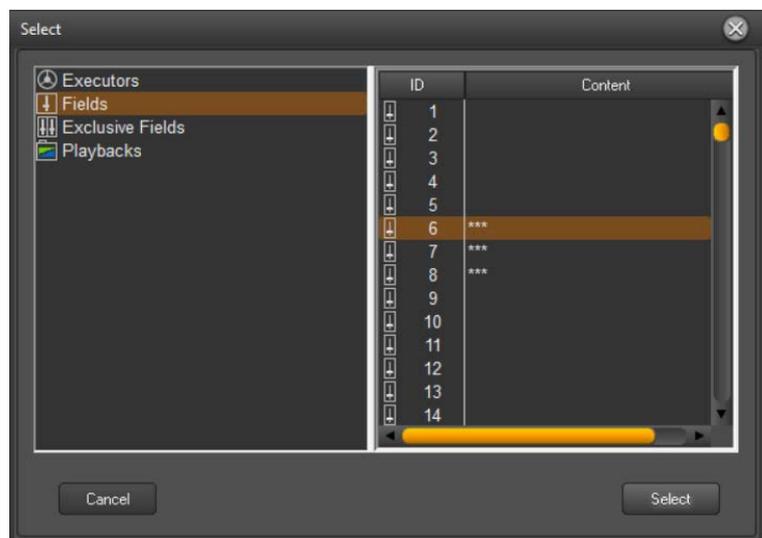

This configuration affects:

- The faders from 1 to 6 at fields 1 to 6 in Bank 1
- the last 2 faders 7 and 8 at the Playback Crossfade 1.
- the first 2 encoders at Exclusive Fields C1 to C4

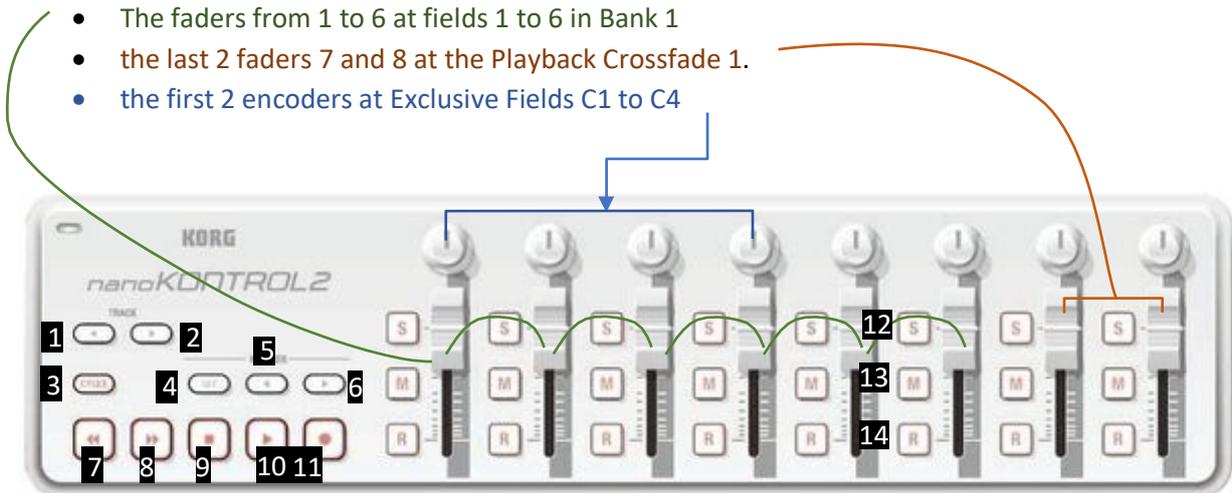

The control keys Faders

- | | |
|-----|--------------|
| 1. | FADER BANK + |
| 2. | FADER BANK - |
| 3. | ALL |
| 4. | C/ALT |
| 5. | -% |
| 6. | +% |
| 7. | SEQ- |
| 8. | SEQ+ |
| 9. | PAUSE/BACK |
| 10. | GO |
| 11. | RECORD |

keys


- | | |
|-----|--------|
| 12. | ASSIGN |
| 13. | START |
| 14. | FLASH |

Once you've finished your setup, consider clicking On Store to keep these changes on the next restart.

If you need to export this configuration to other PCs click the **Save to File** button, to save it to your hard drive or a USB stick.

Finally, it is imperative to open the control window dedicated to this console by making a right click on the console concerned on the left, **if you have assigned a crossfade as here.**

This opens this window:

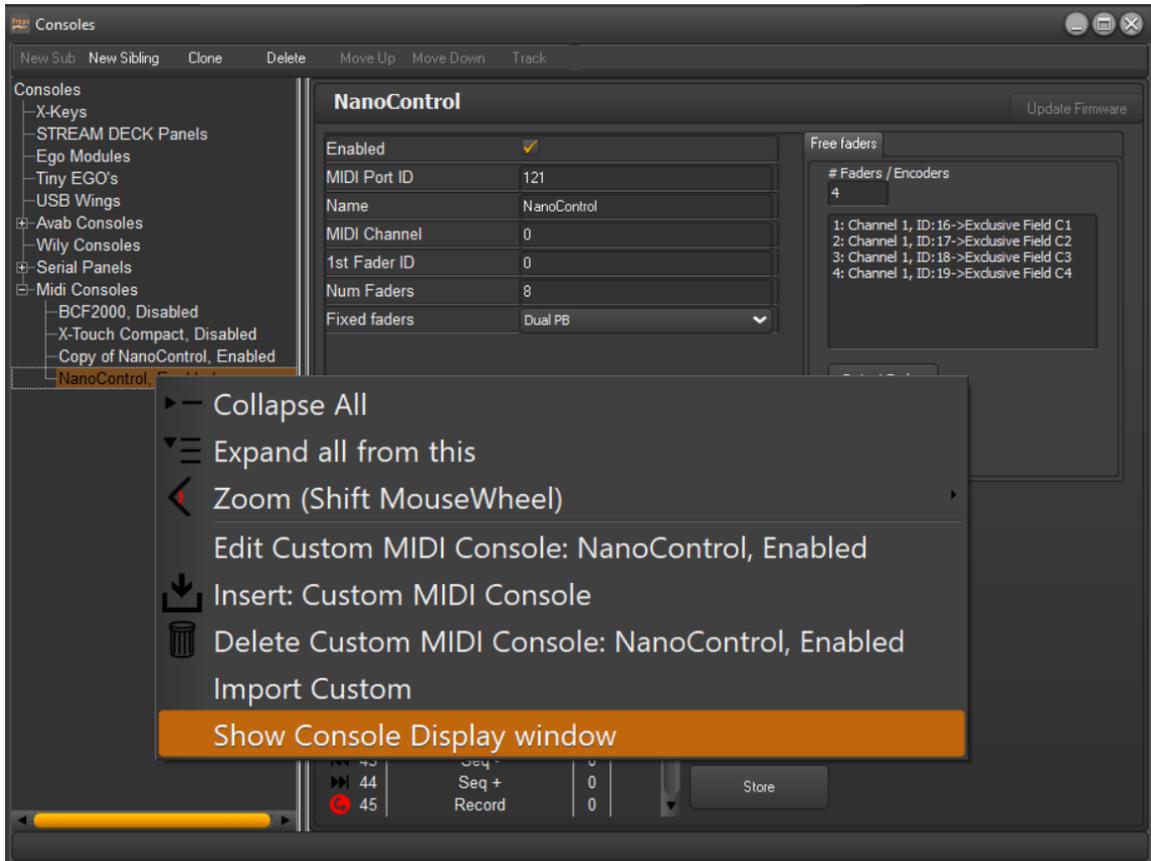

Dock it in a sub-screen of your choice.

